

# Nally Radio Towers PTY LTD

## INSTALLATION INSTRUCTIONS

1. As shown in Fig One make sure all "J" bolts have sufficient thread clearance to allow adjustment both above and below for a 20mm thick mounting plate.
2. Do not, when pouring concrete allow concrete to rise above lower nuts.
3. Make sure 2 layers of Rio are used as per specifications set at 75mm below top and above bottom of concrete Slab.
4. Make sure concrete is worked to remove all air pockets particularly around "J" bolts assembly.
5. The top surface must have slight fall from centre at "J" bolts to outer edge of no less than 25mm.
6. All concrete used is to be no less that 25mpa as per specifications.
7. Cables and /or conduit must have minimum clearance outside "J" bolt assembly of no less than 150mm.

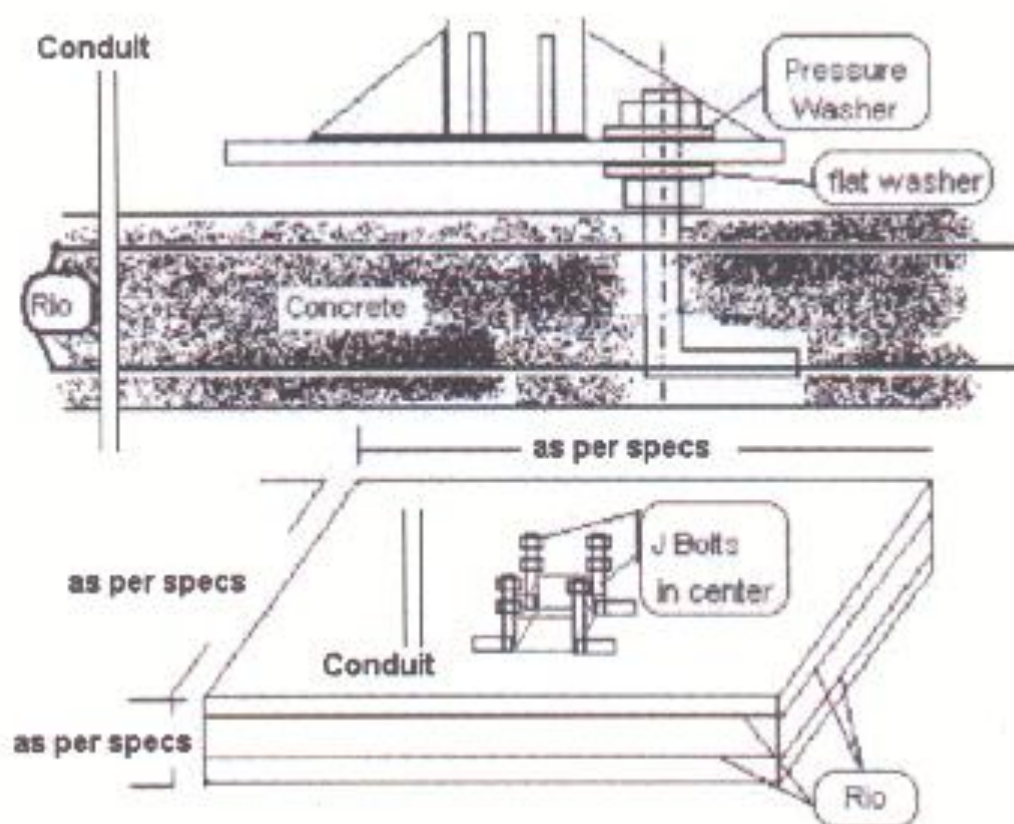


Fig One (not to scale, indicative only)

5 Dortad Court  
Hampton Park  
Victoria 3976

Ph (03) 9702 9225  
Fax (03) 9799 7813